

SAFETY AND PRECAUTION


! WARNING

- *Before cleaning the fan, disconnect the electric supply for safety purpose.
- *Do not apply chemical such as insecticide spray to your fan.
- *Do not insert your finger or other object through the fan guard while fan is operating.
- *If unusual oscillating movement is observed, immediately stop using the fan and contact authorised service personnel.

! CAUTION

- *The fixing means for attachment to the ceiling such as hooks or other devices shall be fixed with sufficient strength to withstand 10 times the weight of the fan.
- *That mounting of the suspension system shall be performed by the manufacturer, its service agent or suitably qualified persons.
- *The fan is to be installed so that the blades are more than 2.3m above the floor.
- *Handle fan blade with care during cleaning.
- *Use power supply with rating of 220-240V~ 50Hz.
- *Do not use gasoline or other chemical for cleaning.

SCHEMATIC DIAGRAM for Model UAF-16

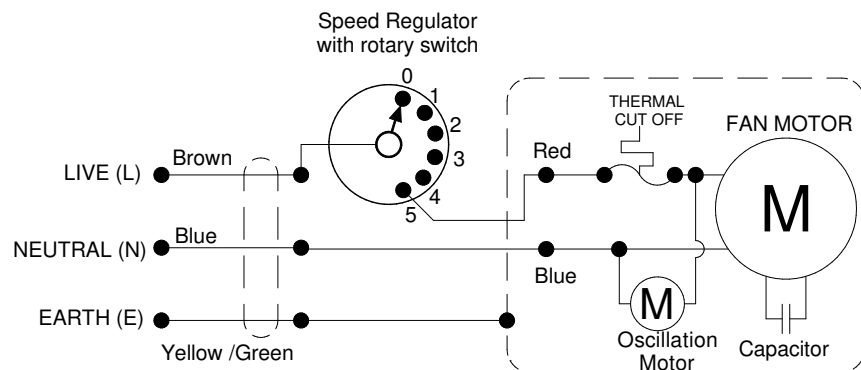

SPECIFICATION

220-240V~ 50Hz				Net weight: 2.9 Kg		Regulator Speed
MODEL	WATTAGE	RPM(+/- 10%)		Oscillations per min.	AIR DEL. m³/min	
		LOW / MIN	HIGH / MAX			
UAF-16	50	900	1310	3	67	5

Specifications are subject to change without notice with development of technology.

Distributor:


United MS Electrical Mfg (M) Sdn Bhd

Lot 48, Jalan Industri 2/1, Rawang Intergrated Industrial Park, 48000 Rawang ,
Selangor Darul Ehsan, Malaysia.



Electric Auto-Fan (16" / 400mm)

Model No. **UAF-16**

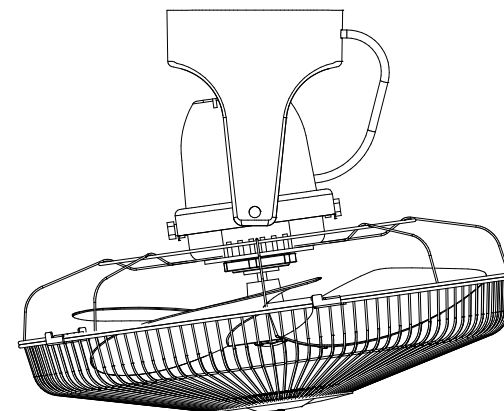

Operating Instruction



Please read these instructions completely before operating the fan.


 


Note:

If the supply cord is damaged, it must be replaced by the manufacturer or the service agent or a similarly qualified person in order to avoid hazard.

The appliance is not to be use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
Children should be supervised to ensure that they do not play with this appliance.


Rev:Feb2018

PART IDENTIFICATION

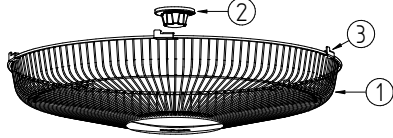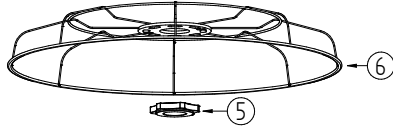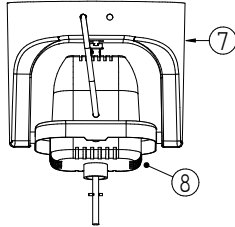


1	FRONT GUARD
2	SPINNER
3	GUARD LOCK
4	BLADE
5	GUARD KNOB
6	REAR GUARD
7	AUTO FAN BODY
8	FAN MOTOR
9	MOUNTING PLATE


ASSEMBLY INSTRUCTION

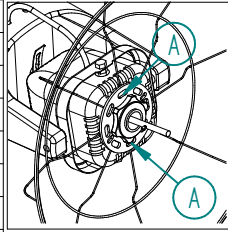


1. Fix the rear fan guard (6) into fan motor (8) according to guidance "A".

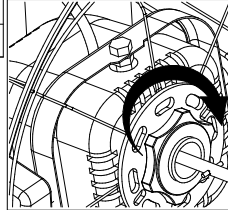

2. Insert the guard knob (5) into the fan motor shaft and turn clockwise direction to fasten.


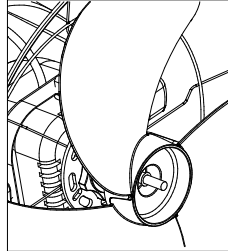


3. Put the fan blade into the shaft of the motor until fully inserted.

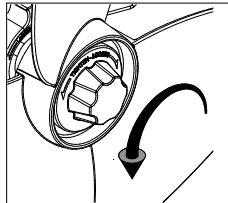


4. Lock the fan blade by turning the locking spinner (2) in counter clockwise direction.

Mounting Hole Dimension

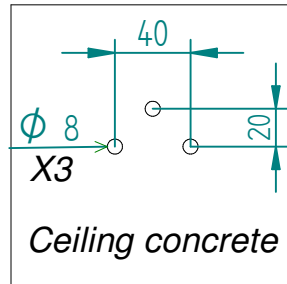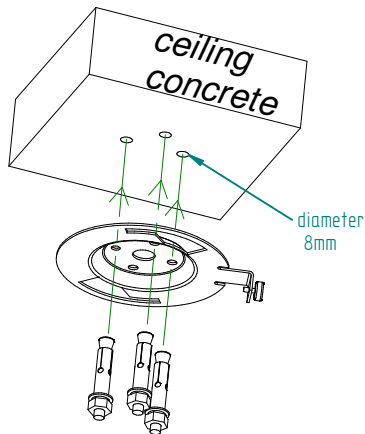


Unit: mm

Wiring Diagram

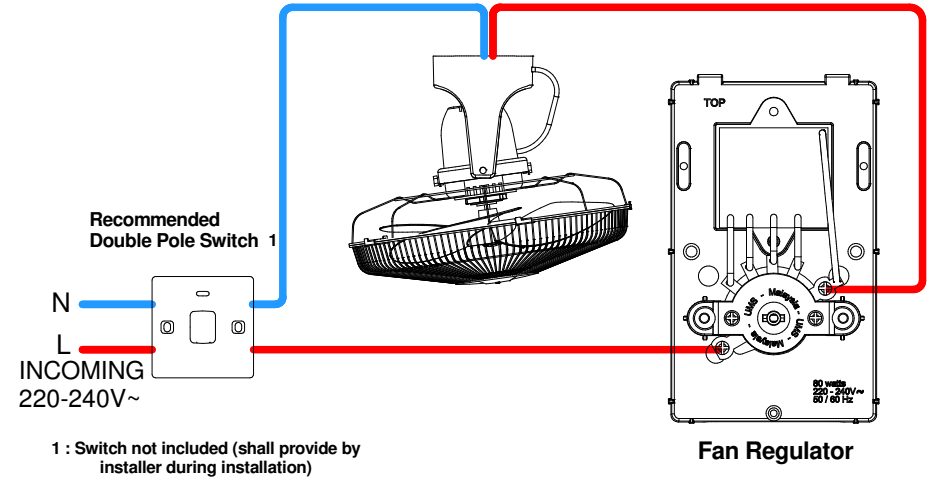

How to adjust oscillation angle

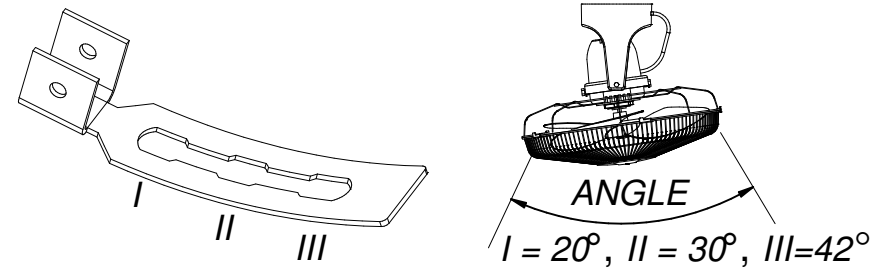

Safety wire installation guide and precaution

