

SAFETY AND PRECAUTION KESELAMATAN DAN PENCEGAHAN

! WARNING / AMARAN

- ⚠ Before cleaning the fan, disconnect the electric supply for safety purpose.
Sebelum melakukan kerja pembersihan untuk kipas, pastikan punca bekalan elektrik telah ditutup.
- ⚠ Do not apply chemical such as insecticide spray to your fan.
Jangan gunakan sebarang bahan semburan seperti racun serangga kepada kipas anda.
- ⚠ Do not insert your finger or other object through the fan guard while fan is operating.
Jangan masukkan sebarang objek menerusi penghadang kipas apabila kipas operasi.
- ⚠ Do not try to repair the fan by yourself, please refer to qualified service agent.
Jangan cuba membaiki kipas dengan sendiri, sila rujuk agen servis yang berkelayakan.

! CAUTION / AWAS

- ⚠ The fan should not be used in high humidity room or wet environment.
Gunakan kipas di tempat yang kering. Tidak menggunakan kipas di tempat yang lembap atau tempat yang basah.
- ⚠ Always keep the fan body clean.
Pastikan kipas sentiasa bersih.
- ⚠ Handle fan blade with care during cleaning.
Jaga bilah kipas dengan cermat ketika menjalankan kerja pembersihan.
- ⚠ Use power supply with rating of 220-240V~ 50Hz.
Gunakan bekalan kuasa 220-240V~ 50Hz.
- ⚠ Do not use gasoline or other chemical for cleaning.
Jangan gunakan gasoline atau bahan kimia yang lain untuk tujuan pembersihan.
- ⚠ Do not use near obstacles or on uneven platforms.
Jangan gunakan berhampiran dengan tempat yang menghalang pusingan kipas atau di tempat yang tidak rata.

SPECIFICATION / SPESIFIKASI

220-240V~ 50Hz					
MODEL	WATTAGE	RPM(+/- 10%)		Blade Size	AIR DEL. m³/min
		LOW / RENDAH	HIGH / TINGGI		
UWF-16R	50	900	1260	16" /400mm	67

Specifications are subject to change without notice with development of technology.
Spesifikasi adalah tertakluk kepada pertukaran tanpa notis selaras dengan perkembangan teknologi.

Diedar oleh:


United MS Electrical Mfg (M) Sdn Bhd
Lot 48, Jalan Industri 2/1, Rawang Integrated Industrial Park,
48000 Rawang, Selangor Darul Ehsan.

Rev: Apr2023



Electric Wall Fan (16" / 400mm) Kipas Elektrik (Kipas Dinding)

Model No. / Nombor Model
UWF-16R

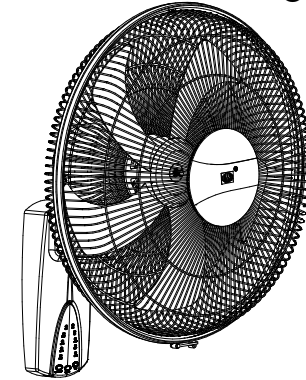

i Before operating the wall fan, please read these instructions completely.
Sebelum mengendalikan set ini, sila baca arahan ini sepenuhnya.


Note: If the supply cord is damaged, it must be replaced by the manufacturer or the service agent or a similarly qualified person in order to avoid hazard.

*Sekiranya "supply cord" rosak, ia mesti digantikan oleh pengilang
Perhatian: atau agen servis atau seorang yang berkelayakan untuk mengelakkan bahaya.*

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
Children being supervised not to play with this appliance.

Operating Instruction/ Buku Panduan

PART IDENTIFICATION / PENGENALAN BAGIAN KIPAS

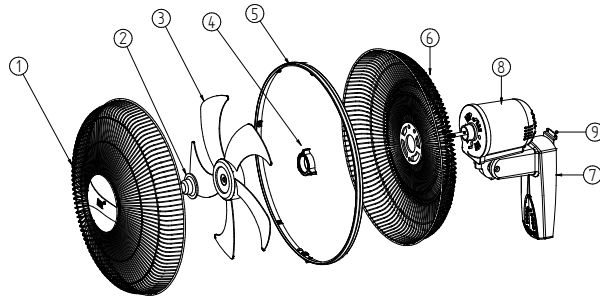

1	FRONT GUARD
2	SPINNER
3	BLADE
4	GUARD KNOB
5	GUARD RING
6	REAR GUARD
7	WALL FAN BODY
8	FAN MOTOR
9	HANGING BRACKET

*To avoid malfunction, please assemble all the parts properly before using.
 *Untuk mengelakkan kegagalan, sila pasang semua bahagian kipas sebelum mengguna.

ASSEMBLY INSTRUCTION / PANDUAN MEMASANG

1. Remove all the parts from the carton box.




1. Keluarkan semua barang daripada kotak.

2. Unscrew the Spinner(2) and Guard Knob(4).

2. Longgarkan "Spinner" (2) dan "Guard Knob(4).


3. Fix the wall fan hanging bracket (9) onto wall with screws.

3) Pastikan kipas dinding "bracket" dipasangkan kuat ke dinding dengan skru.

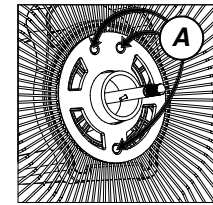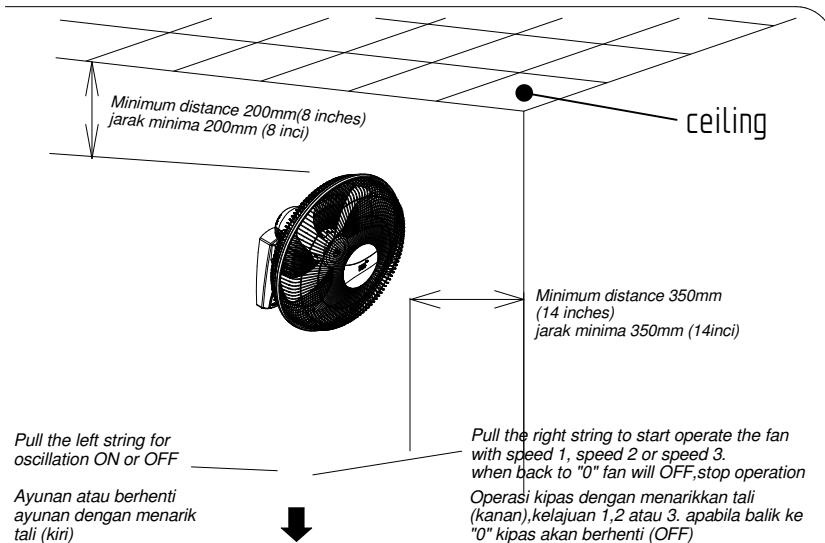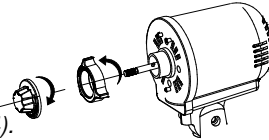


4. Fix the rear fan guard (6) into fan motor according to guidance "A".

4. Pasangkan "rear guard" mengikut tanda pandu "A"

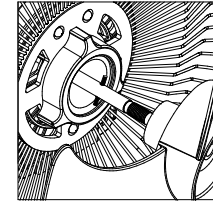


6. Put the fan blade into the shaft of the motor until fully inserted.

6. Masukkan "Fan blade" pada "motor shaft" dan pastikan ia masuk dengan lengkap.

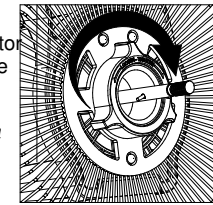



5. Insert the guard knob (4) into the fan motor shaft and turn clockwise direction to fasten.

5. Pasangkan "rear fan guard" dengan mengetatkan "guard locking knob" mengikut arah jam.

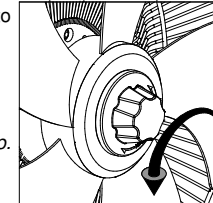


7. Lock the fan blade by turning the locking spinner in counter clockwise direction.

 7. Ketatkan "fan blade" dengan "Locking spinner" mengikut arah lawan jam.

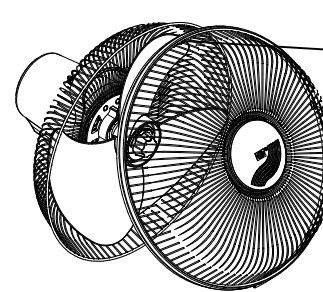

Attention!

Attach it by tightening the fastener screw from backside direction as shown in the right picture.

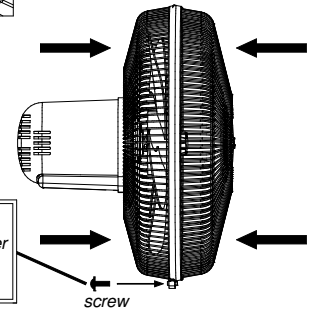


8. Fix the front & rear fan guard together as shown in the picture.

8. Pasangkan "Fan guard" depan & belakang seperti di gambar rajah.

How to operate / operasi


Press the button "ON/SPEED" to start operate the fan with speed Low, speed Medium or High.

operasi kipas dengan menekan butang "ON/SPEED" ,kelajuan Low, Medium atau High.

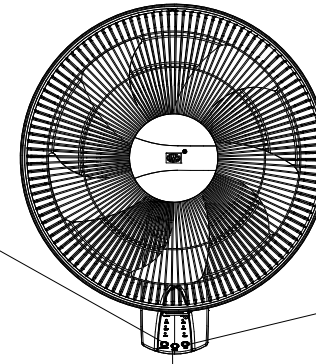

Press button "SWING" for oscillation ON or OFF

Ayunan atau berhenti ayunan dengan menekan butang "SWING"

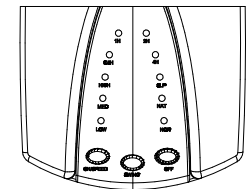

Press button "OFF" for switch off the fan

Berhenti dengan menekan butang "OFF"